

Technical Newsletter

#tnl2024-0010e

1 / 1



Handling Method and Safety Information for the Batteries Used for Equipment

Introduction

This equipment uses the following primary batteries. Dispose of the used batteries in compliance with laws and regulations in each country.

Category of battery: Portable battery

Battery name: Coin type primary lithium battery, cylindrical type primary lithium battery, alkaline manganese dry battery



Handling method and safety information for the batteries

- Please contact DISCO when you install or remove batteries.
- Do not install batteries with the positive terminal and negative terminal reversed.
- Do not use the batteries scratched on the surface.
- Do not touch liquid leaked from the batteries.
- Do not swallow batteries.
- Do not throw batteries into the fire or heat them.
- Do not put batteries into the water.
- Do not cause the batteries to short-circuit, such as by connecting the terminal with a wire, etc.
- Do not disassemble batteries or deform them by applying pressure.
- Do not apply strong shock by dropping or throwing the batteries.
- Remove the batteries from the equipment after they are used up.
- When more than one battery is used, do not use new batteries and used ones at the same time. Do not use different types of batteries together.
- The batteries installed in the equipment are non-rechargeable, except for the secondary batteries in the uninterruptible power supply (UPS). Do not charge non-rechargeable batteries.
- Do not keep batteries with a metal necklace or hairpin, etc.
- Keep the batteries away from the place where they are exposed to high temperature, high humidity, and direct sunlight.

Inquiries

Please contact your local DISCO sales representative or DISCO customer engineer if you have any questions regarding this matter.

DISCO CORPORATION

Liebigstrasse 8, D-85551 Kirchheim b. Muenchen, Germany
Phone: 49-(0)89-90903-0

For your nearest DISCO office, visit our website at:
<http://www.disco.co.jp>

